



1.16


A Typical Workflow of Routine Analysis

Std. Familiarization Time: 0:10:00


Approximate Video Time: 0:05:00

[Play the Video](#)


Turn On ICP-MS

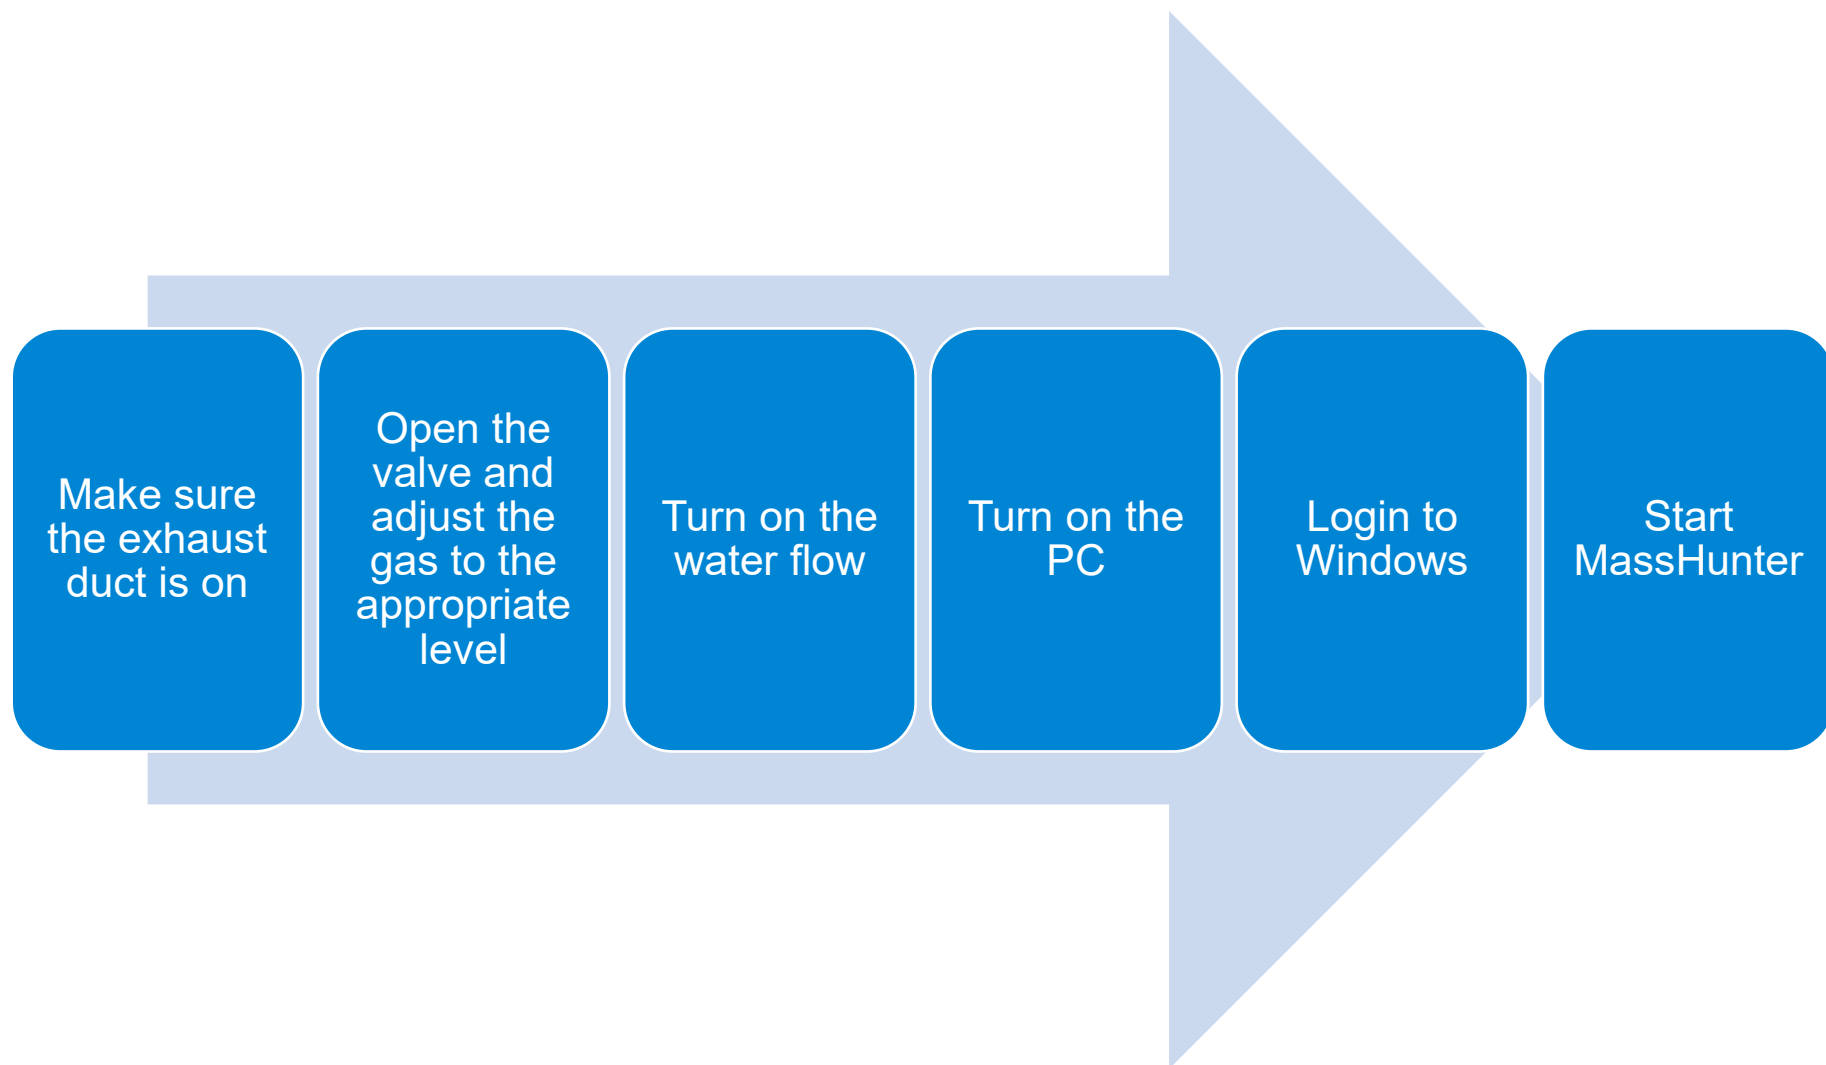

Plasma On

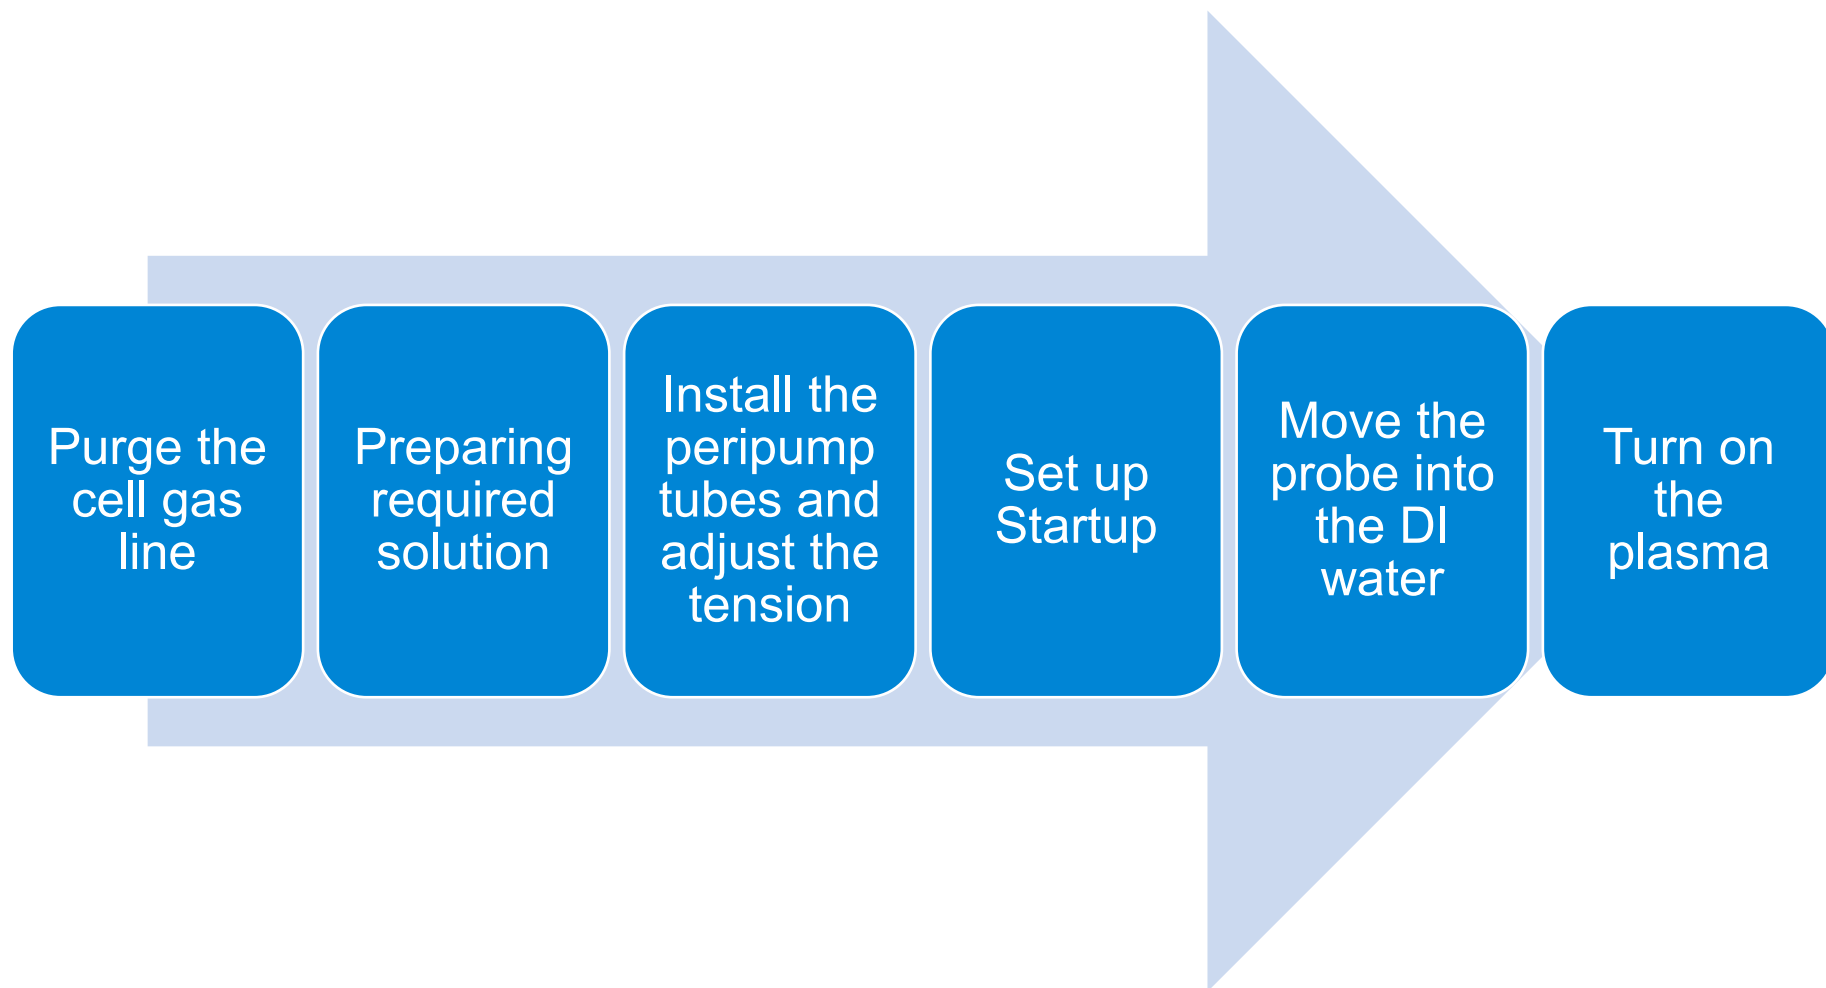

Running a Batch

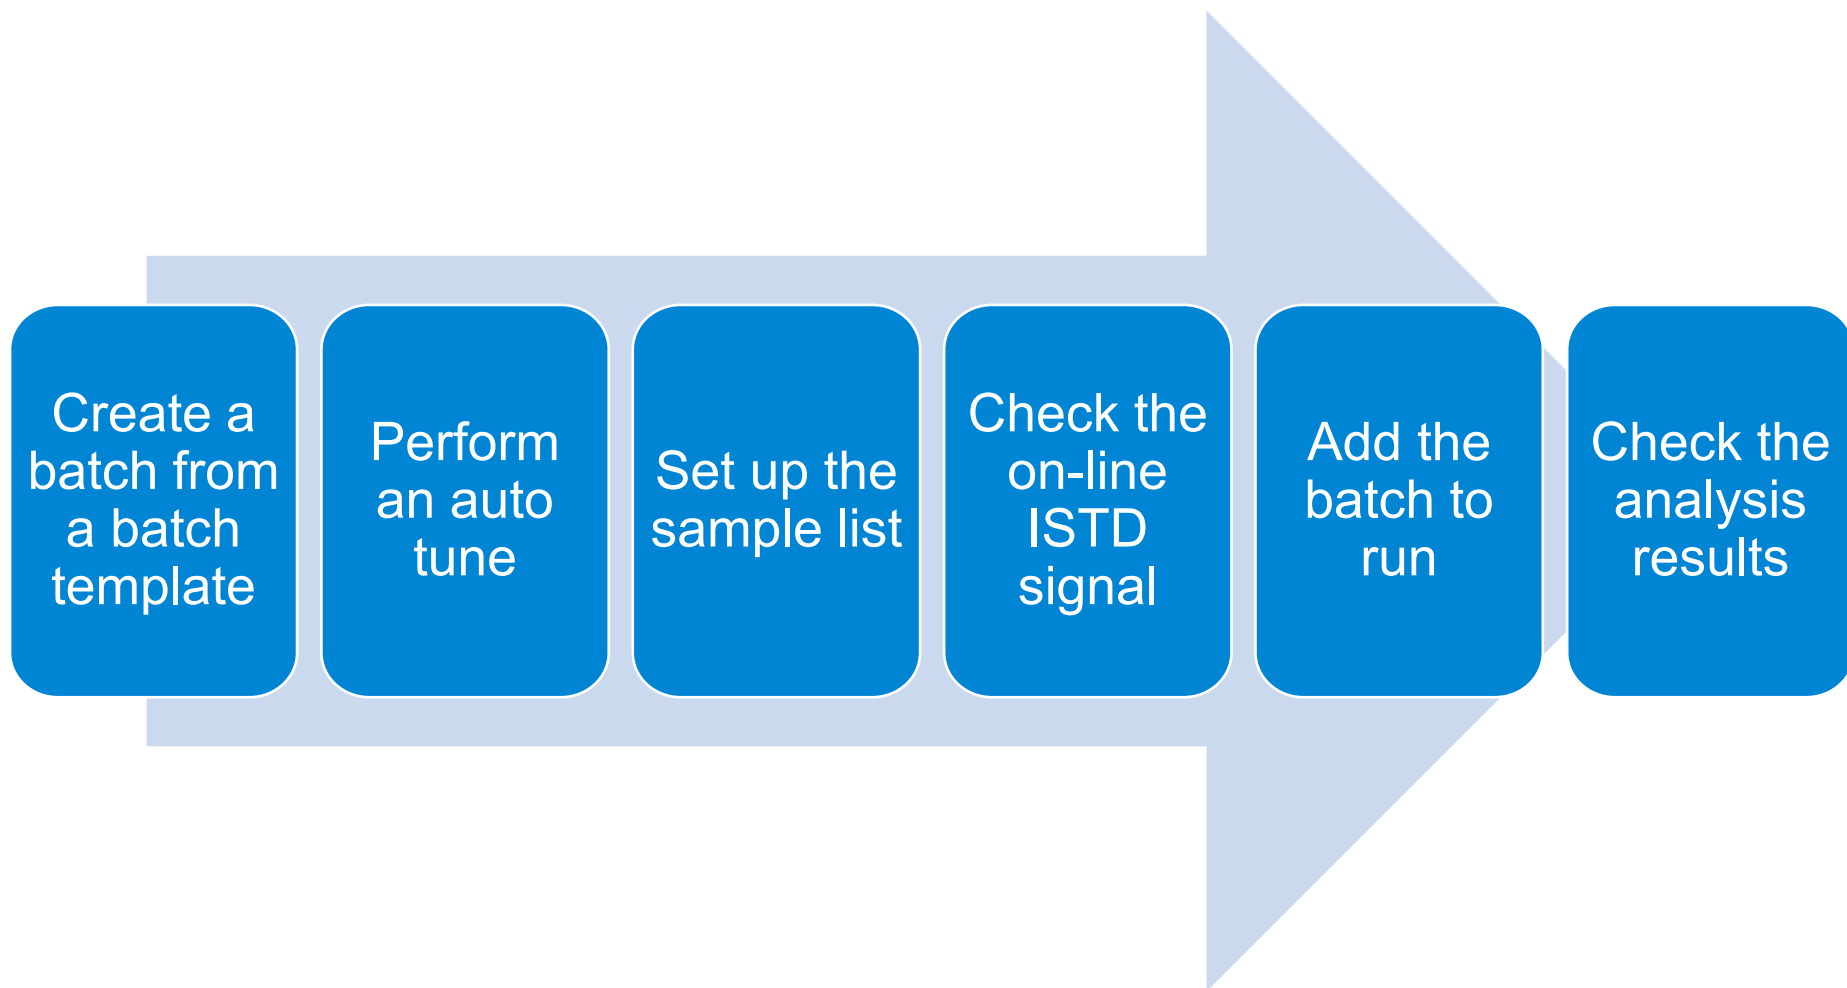

Plasma Off and Standby

Turn off the
plasma and
check
standby

Release the
peripump
tubes

Close the gas
valves

Stop the
coolant flow

Shutdown
MassHunter

Turn off the
PC

